


 













 

























 



 









 

 

 

 



 




Original		Rechange		Original		Rechange	
	Power		Power		Info		Info
	Sleep		Sleep		Input		AV
	Mute		Mute		Up / CH+		Up
	1		1		Up / CH+		Ch +
	2		2		Down / CH-		Down
	3		3		Down / CH-		Ch -
	4		4		Right / Vol+ / Enter		Right
	5		5		Left / Vol-		Left
	6		6		Left / Vol-		Vol -
	7		7		Right / Vol+ / Enter		Vol +
	8		8		Right / Vol+ / Enter		Ok
	9		9		Menu		Menu
	0		0		Page+		>>
	-/--		Guide		Page-		<<
	Recall		Back		Display		Shift + Info
	Audio		Dual				Exit
	P.M.		Smart		Red		Red





	Original	Rechange	Original	Rechange
	Green	 B		
	Yellow	 C		
	Blue	 D		
	Size	 ZOOM		
	Stop			
	Reveal	 SEARCH TV/R		
	Index	 SETTINGS OPT		
	4:3 / 16:9	 PICTURE FORMAT		
	C.Lock	 APP MEDIA		
	Sub.PG	 AD SUBT		
	On/Mix/Off	 REPEAT TEXT		

