




 







 















Original		Recharge		Original		Recharge	
	POWER		Power		REPEAT/GREEN/▼		Green / APP / Repeat
	INFO		Info / Angle		7		7
	HDMI CONTROL		Smart / List		8		8
	SLEEP		Sleep / Timer		9		9
	SCREEN		Picture / Format		ROOT/YELLOW		Yellow / YouTube / Repeat
	SOURCE		AV / Input / RDS		RETURN		Back / Return
	PRESETS		Setup / OPT /		0		0
	1		1		MENU		Menu / Home
	2		2		TITLE/BLUE		Sound / Title
	3		3		TITLE/BLUE		Blue / Prime Video / Random
	ZOOM/RED/▲		Zoom / Size		UP		Up
	ZOOM/RED/▲		Shift + CH+ /		LEFT		Left
	ZOOM/RED/▲		Red / Netflix / Search		OK/SELECT		OK
	4		4		RIGHT		Right
	5		5		DOWN		Down
	6		6		P+		CH+ / Page+
	REPEAT/GREEN/▼		Shift + CH- /		P-		CH- / Page-

Page-





Original	Rechange
	Vol-
	Vol+
	Fav / Marker / PC
	Audio / Lang I/II
	Subtitle / EQ
	Mute / Dimmer
	+ Shift + Back / Return
	Guide / EPG / -/--
	D.Menu / Top
	Text / Goto
	Exit / Cancel / Clear
	Display / Media
	+ Shift + Info / Angle
	+ Shift + Red / Netflix /
	Rec / Rec Mode
	Stop / Hold
	Play / Slow

Original	Rechange
	Pause / Step / Freeze
<< button"/>	<< / Tune-
>> button"/>	>> / Tune+
	I<< / Preset-
	>>I / Preset+

