

 



 





 

 

 

 



 







 

 

 

 

 

 



 





 

 



















 

 


 


Original		Rechange		Original		Rechange	
	Power		Power		CHN List		Smart / List
	Mute		Mute / Dimmer		0		0
	Picture		Picture / Format		Return / Back		Back / Return
	Sound		Sound / Title		Menu		Menu / Home
	Zoom		Zoom / Size		Up		Up
	Subtitle		Subtitle / EQ		Source		AV / Input / RDS
	EPG		Guide / EPG / -/--		Left		Left
	FAV		Fav / Marker / PC		Enter		OK
	1		1		Right		Right
	2		2		Down		Down
	3		3		Exit		Exit / Cancel / Clear
	4		4		TV / Radio		TV/Radio /
	5		5		Vol +		Vol+
	6		6		Home		D.Menu / Top
	7		7		PR +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		PR -		CH- / Page-





Original	Rechange
 Rec	 Rec / Rec Mode
 Sleep	 Sleep / Timer
 Info	 Info / Angle
 Play/Pause / Index	 Play / Slow
 Play/Pause / Index	 Pause / Step / Freeze
 << / Reveal	 << / Tune-
 >> / Mix	 >> / Tune+
 Stop / Cancel	 Stop / Hold
 I<< / Size	 I<< / Preset-
 >>I / Sub-Page	 >>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 I/II / Nicam	 Audio / Lang I/II
 Text	 Text / Goto
 Freeze / Hold	 Shift + Stop / Hold

Original	Rechange
 PVR List	 Display / Media
 Quick	 Setup / OPT /
 AD	 Eject / Surround
 3D	 Shift + 3

