 



 



 







 

 













 







 



 
 


 
 


 



 

 



















 
 








Original		Rechange		Original		Rechange	
	PIP/[]		Picture / Format		OK		OK
	Web		Smart / List		Green		Green / APP / Repeat
	Back/End		Exit / Cancel / Clear		Yellow		Yellow / YouTube / Repeat
	DR+/Pop-Up-M		D.Menu / Top		<<		<< / Tune-
	*/Zoom		Zoom / Size		Play		Play / Slow
	Blue/Marker		Blue / Prime Video / Random		>>		>> / Tune+
	Red		Red / Netflix / Search		Rec		Rec / Rec Mode
	Text/Disc-M		Text / Goto		Pause		Pause / Step / Freeze
	Info		Info / Angle		Stop		Stop / Hold
	Vol+		Vol+		7		7
	Vol-		Vol-		Mute		Mute / Dimmer
	P+		CH+ / Page+		1		1
	P-		CH- / Page-		2		2
	Up		Up		3		3
	Down		Down		4		4
	Right		Right		5		5
	Left		Left		6		6





 

 
































 




Original	Recharge	Original	Recharge
	Power		Power
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	EPG		Guide / EPG / -/--
	Home		Shift + Menu /
	Menu		Menu / Home



 







 





 



 

 







 







 

































Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 DR+/Pop-Up-M	 D.Menu / Top
 */Zoom	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV / Input / RDS
 EPG	 Guide / EPG / -/--
 Home	 Menu / Home

Original	Rechange
 PIP/[]	 Picture / Format
 Text	 Text / Goto
 Back	 Back / Return
 Info	 Info / Angle
 Vol+	 Vol+
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/Marker	 Blue / Prime Video / Random





Original	Recharge
 DR+/Pop-Up-M	 D.Menu / Top
 */Zoom	 Zoom / Size
 Blue/Marker	 Blue / Prime Video / Random
 Back/End	 Exit / Cancel / Clear
 PIP/[]	 Picture / Format
 Red	 Red / Netflix / Search
 Info	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Green	 Green / APP / Repeat

Original	Recharge
 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 7	 7
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 Power	 Power
 8	 8





 

 

 











 



















 
 
 



Original	Recharge	Original	Recharge
9 wxyz	9	BLUETOOTH 9	9
0 AV	0	HDMI - SAT 0	0
0 AV	AV	RDS AV INPUT	AV / Input / RDS
EPG	EPG	GUIDE EPG	Guide / EPG / -/-
HOME	Home	SHIFT + HOME MENU	Shift + Menu /
DISC-M TEXT	Text	GOTO TEXT	Text / Goto
MENU	Menu	HOME MENU	Menu / Home









 











Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 DR+/Pop-Up-M	 D.Menu / Top
 */Zoom	 Zoom / Size
 Web	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 AV	 0 AV
 AV	 AV / Input / RDS
 EPG	 Guide / EPG / -/-

Original	Rechange
 Home	 Shift + Menu /
 PIP/[]	 Picture / Format
 Text	 Text / Goto
 Menu	 Menu / Home
 Back/End	 Exit / Cancel / Clear
 Info	 Info / Angle
 Vol+	 Vol+
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Recharge	Original	Recharge
	Yellow		Yellow / YouTube / Repeat
	Blue/Marker		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

