


 



 

 


















Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		9		9
	Power		Power		*EPG		Guide / EPG / -/-
	O/F.Set		Sleep / Timer		0/AV		0
	[]/F. List		Smart / List		0/AV		AV / Input / RDS
	Audio		Audio / Lang I/II	# PIP button"/>	#PIP		Setup / OPT /
	[+]/Picture		Picture / Format		Text		Text / Goto
	→[]←/Rec Menu		D.Menu / Top		Menu		Menu / Home
	Radio/Search		TV/Radio /		End		Exit / Cancel / Clear
	Radio/Search		Shift + Red / Netflix /		Info		Info / Angle
	1		1		P+		CH+ / Page+
	2		2		Up		Up
	3		3		Vol-		Vol-
	4		4		Left		Left
	5		5		OK		OK
	6		6		Down		Down
	7		7		Vol+		Vol+
	8		8		Right		Right





 

 

 

 

 









 

 

 


 



 



 



 

 

 

















 







Original		Recharge		Original	Recharge
	P-		CH- / Page-		
	Red/C-Set		Red / Netflix / Search		
	Green/SV		Green / APP / Repeat		
	Yellow/Title		Sound / Title		
	Yellow/Title		Yellow / YouTube / Repeat		
	Blue/Card		Blue / Prime Video / Random		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		






Original	Rechange	Original	Rechange
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	*EPG		Guide / EPG / -/--
	0/AV		AV / Input / RDS
	0/AV		0
# PIP button" data-bbox="228 848 261 878"/>	#PIP		Picture / Format
	Menu		Menu / Home
	Info		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Down		Down
	Vol+		Vol+
	Right		Right
	P-		CH- / Page-
	Red/C-Set		Red / Netflix / Search
	Green/SV		Green / APP / Repeat
	Yellow/Title		Yellow / YouTube / Repeat
	Yellow/Title		Sound / Title
	Blue/Card		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+





 

 

 
 
 

 

 

 





 

 

 

 

 







Original		Recharge		Original		Recharge	
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				





Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 O/F.Set	 Sleep / Timer
 []/F. List	 Smart / List
 Audio/Repeat	 Shift + Green / APP /
 Audio/Repeat	 Audio / Lang I/II
 [+]/Picture	 Picture / Format
 →[]←/Rec Menu	 Text / Goto
 Radio/Search	 Shift + Red / Netfix /
 Radio/Search	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Rechange
 8	 8
 9	 9
 DVD-AV	 AV / Input / RDS
 0/AV	 0
# PIP button" data-bbox="507 348 540 378"/> # PIP	 Setup / OPT /
 Disc-M	 D.Menu / Top
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Right	 Right



 



 

 

 

 

 

 

 

 

 

 

 

 



 

 







 

 



 

 

 



 

 

 











Original		Recharge		Original	Recharge
	P-		CH- / Page-		
	Red/C-Set		Red / Netflix / Search		
	Green/SV		Green / APP / Repeat		
	Yellow/Title		Yellow / YouTube / Repeat		
	Yellow/Title		Sound / Title		
	Blue/Card		Blue / Prime Video / Random		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		







Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		8		8
	Power		Power		9		9
	O/F.Set		Sleep / Timer		*EPG		Guide / EPG / -/--
	[]/F.List		Smart / List		0/AV		0
	Audio/Repeat		Green / APP / Repeat		0/AV		AV / Input / RDS
	Audio/Repeat		Audio / Lang I/II		#PIP		Setup / OPT /
	[+]/Picture		Picture / Format		Menu		Menu / Home
	→[]←/Rec Menu		D.Menu / Top		End		Exit / Cancel / Clear
	Radio/Search		Red / Netflix / Search		Info		Info / Angle
	Radio/Search		TV/Radio /		P+		CH+ / Page+
	1		1		Up		Up
	2		2		Vol-		Vol-
	3		3		Left		Left
	4		4		OK		OK
	5		5		Down		Down
	6		6		Vol+		Vol+
	7		7		Right		Right





	Original	Recharge	Original	Recharge
	P-	 CH- / Page-		
	<<	 << / Tune-		
	Play	 Play / Slow		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		

