 









 

 






 
 

 

 



 



 
 


 



 



 










 
 















Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Prog		Shift + TV/Radio / Program
	1		1		CH-		CH- / Page-
	2		2		Aspect		Shift + Picture / Format
	3		3		S.Mode		Sound / Title
	4		4		P.Mode		Picture / Format
	5		5		Guide/Title		Guide / EPG / -/-
	6		6		Guide/Title		Shift + Sound / Title
	7		7		Menu		Menu / Home
	8		8		Up		Up
	9		9		Input		AV / Input / RDS
	List		Smart / List		Left		Left
	0		0		OK		OK
	Recall		Back / Return		Right		Right
	Vol+		Vol+		Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer		Down		Down
	CH+		CH+ / Page+		Exit		Exit / Cancel / Clear







Original	Rechange
i	ANGLE INFO Info / Angle
SETUP FAV FAV/Setup	PC FAV MARKER Fav / Marker / PC
SETUP FAV FAV/Setup	OPT-TOOLS SETUP Setup / OPT /
ANGLE TV.RD Tv/RD/Angle	SHIFT + ANGLE INFO Shift + Info / Angle
ANGLE TV.RD Tv/RD/Angle	PROGRAM TV/RADIO TV/Radio /
AD AD	LANG I/I AUDIO Audio / Lang I/I
MENU TEXT Text/Menu	GOTO TEXT Text / Goto
MENU TEXT Text/Menu	TOP MENU D.MENU D.Menu / Top
↑	SHIFT + ↑ Shift + Up
S S	MEDIA DISPLAY Display / Media
ZOOM Zoom / Rec	SIZE ZOOM Zoom / Size
ZOOM Zoom / Rec	REC MODE Rec / Rec Mode
←/Cancel	SHIFT + ← Shift + Left
←/Cancel	SHIFT + CLEAR EXIT CANCEL Shift + Exit / Cancel / Clear
MIX OK OK/Mix	SHIFT + OK Shift + OK
→/Size	SHIFT + → Shift + Right
→/Size	SHIFT + SIZE Shift + Zoom / Size

Original	Rechange
Stop	HOLD Stop / Hold
Eject	SURROUND Eject / Surround
↓	SHIFT + ↓ Shift + Down
Play	SLOW Play / Slow
STEP II Pause/Step	STEP-FREEZE II Pause / Step / Freeze
I<</Hold	PRESET- I<< / Preset-
I<</Hold	SHIFT + HOLD Shift + Stop /
REVEAL >>/Reveal	PRESET+ >>/Preset+
SUBPAGE <</Subpage	TUNE- << / Tune-
INDEX >>/Index	TUNE+ >> / Tune+
GOTO Red/Goto	SHIFT + GOTO TEXT Shift + Text /
GOTO Red/Goto	NETFLIX SEARCH Red / Netflix / Search
SLOW Green/Slow	APP REPEAT Green / APP / Repeat
SLOW Green/Slow	SHIFT + SLOW Shift + Play /
REPEAT Yellow/Repeat	SHIFT + APP Shift + Green / APP /
REPEAT Yellow/Repeat	YouTube REPEAT A-B Yellow / YouTube / Repeat
A-B Blue/A-B	SHIFT + YouTube REPEAT A-B Shift + Yellow / YouTube / Repeat





Original	Rechange	Original	Rechange
 Blue/A-B	 Blue / Prime Video / Random		

