





 







 


 





 

 

 





 

 















 




Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 <<	 << / Tune-
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 I<<	 Yellow / YouTube / Repeat
 I>>	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>	 >> / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Index	 Info / Angle
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Subtitle	 Subtitle / EQ

Original	Rechange
 Mix	 Picture / Format
 Reveal	 D.Menu / Top
 TTX	 Text / Goto
 Clock	 Sleep / Timer
 Audio Language	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 S	 Sound / Title
 R	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 M	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Flip	 Smart / List





Original		Recharge	
+ CH	CH+	+ CH PAGE	CH+ / Page+
VOL -	Vol-	VOL -	Vol-
EPG	EPG	GUIDE EPG	Guide / EPG / -/--
CH -	CH-	CH PAGE -	CH- / Page-
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
FAV	FAV	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - BAT 0	0
Recall	Recall	RETURN BACK	Back / Return

Original		Recharge	

