 
 

 
 

 
 



 
 
 




Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Timer		Sleep / Timer		Back		Back / Return
	Rec		Rec / Rec Mode		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Info		Info / Angle
	[ ● ]		Zoom / Size		Up		Up
	*/Setup		Setup / OPT /		Down		Down
	EPG/Guide		Guide / EPG / -/--		Left		Left
	■ ■		Picture / Format		Right		Right
	Π/Mode		Audio / Lang I/II		OK		OK
	[:::] / KB		Display / Media		CH+		CH+ / Page+
	FAV		Fav / Marker / PC		CH-		CH- / Page-
	APP		Green / APP / Repeat		I<</PgUp		I<< / Preset-
	TV		TV/Radio /		>>I/PgDown		>>I / Preset+
	Red/F1		Red / Netflix / Search		Vol+		Vol+
	Green/F2		Shift + Green / APP /		Vol-		Vol-
	Yellow/F3		Yellow / YouTube / Repeat		<<		<< / Tune-
	Blue/F4		Blue / Prime Video / Random		>>		>> / Tune+





Original	Recharge	Original	Recharge
 Play/Pause	 Play / Slow		
 Stop	 Stop / Hold		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 >[ ]<	 Subtitle / EQ		
 Recall	 Shift + Back / Return		

