

 
 


 







 



 











 



 



 



 

 



 



 



















| Original | | Rechange | | Original | | Rechange | |
|---|----------|---|--------------------|---|--------------|---|-----------------------|
|  | 1 |  | 1 |  | Left / Vol- |  | Left |
|  | 2 |  | 2 |  | Left / Vol- |  | Vol- |
|  | 3 |  | 3 |  | OK |  | OK |
|  | Power |  | Power |  | Right / Vol+ |  | Right |
|  | 4 |  | 4 |  | Right / Vol+ |  | Vol+ |
|  | 5 |  | 5 |  | Mute |  | Mute / Dimmer |
|  | 6 |  | 6 |  | Menu / Setup |  | Menu / Home |
|  | TV/R |  | TV/ Radio / |  | Menu / Setup |  | Setup / OPT / |
|  | 7 |  | 7 |  | Down / CH- |  | Down |
|  | 8 |  | 8 |  | Down / CH- |  | CH- / Page- |
|  | 9 |  | 9 |  | Audio1 - |  | << / Tune- |
|  | EPG |  | Guide / EPG / -/-- |  | Audio1 + |  | >> / Tune+ |
|  | 0 |  | 0 |  | Set / Info |  | Info / Angle |
|  | Up / CH+ |  | Up |  | Next / ESC |  | Exit / Cancel / Clear |
|  | Up / CH+ |  | CH+ / Page+ |  | Audio2 - |  | I<<< / Preset- |
|  | A/D |  | Sound / Title |  | Audio2 + |  | >>>I / Preset+ |
|  | (<>) L |  | Audio / Lang I/II |  | Down |  | Smart / List |





| Original | Recharge | Original | Recharge |
|---------------|---------------------------|----------|----------|
| Stop / Recall | Stop / Hold | | |
| Stop / Recall | Back / Return | | |
| A/B / ADR | Yellow / YouTube / Repeat | | |
| Memo | Fav / Marker / PC | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

