







 
 




Original	Rechange
 Standby	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide
 Time	 AV
 Subtitle	 Subt
 Language	 Dual
 Title	 Smart

Original	Rechange
 Angle	 Red
 Vol+	 Vol +
 Vol-	 Vol -
 Slow	 Format
 Zoom	 Shift + Eject
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Menu	 Menu
 Display	 Info
 Setup	 Options
 Goto	 Pre Ch
 Up	 Up





Original	Rechange	Original	Rechange
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	A-B		3D
	Repeat		Text
	Mute		Mute
	Return		Back
	Prog		Sleep
	P/N		Yellow
	PBC		D. Menu
	L/R		Green
	Random		List
	Digest		Blue
	Mode		TV/R
	HD		Media

