




 

 




 
 










 

 

 


 

 
 



 
 

 

 
 
 
 
 
 

 
 

 
 

 

 



 


 






Original		Recharge		Original		Recharge	
	Power		Power		TXT/MIX		Text
	Sleep		Sleep		Play		Play
	Mute		Mute		Pause		Pause
	Mode		Media		Stop		Stop
	1		1		Rec		Rec
	2		2		>>/Index		>>
	3		3		<</Hold		<<
	4		4		I<<		I<<
	5		5		>>I		>>I
	6		6		Cancel		Exit
	7		7		Menu		Menu
	8		8		DTV/Radio		TV/R
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	-/--		Shift + Guide		Up		Up
	Back		Back		Down		Down
	Nicam/A2		Dual		Right		Right




 



 
 




 
 











Original		Recharge		Original		Recharge	
	Left		Left		FAV-		Shift + Ch -
	Enter		Ok				
	CH+		Ch +				
	CH-		Ch -				
	FAV		Pre Ch				
	EPG		Guide				
	Info		Info				
	List		List				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Size		Format				
	Reveal		3D				
	Subtitle		Subt				
	Subpage		AV				
	FAV+		Shift + Ch +				





Original	Recharge	Original	Recharge
Power		Power	Power
Mute		Mute	Mute
[I]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Original	Recharge	Original	Recharge
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Original	Recharge	Original	Recharge
Audio	Dual		
I<</[≡+]	I<<		
>>/[≡..]	>>I		
[≡i]	Smart		
Play	Play		
Pause	Pause		
Stop	Stop		
REP/Rec	Rec		
<</[≡o]	<<		
>>/[≡?]	>>		
FAV	Pre Ch		

