






 
 



| Original | Recharge | Original | Recharge |
|---------------|---|----------|----------|
| Power ON/Off |  Power | | |
| Tape 1 Preset |  Up | | |
| Tape 1 Stop |  Down | | |
| CD Play |  Play | | |
| CD Rewind |  << | | |
| Tape 1 F.FWD |  Right | | |
| Tape 1 Play |  Ok | | |
| Tape 1 Rew |  Left | | |
| CD Pause |  Pause | | |
| CD F.FWD |  >> | | |
| Stop |  Stop | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

