



 





 

 







 


 



 





 




Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 Smart
 Back	 Back
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Sleep	 Sleep

Original	Rechange
 MTS	 Options
 Aspect	 3D
 FAV/List	 Pre Ch
 Media	 Media
 Freeze	 Eject
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Source	 AV
 Exit	 Exit
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Rechange		Original		Rechange	
	Enter		Ok		Text		Text
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Play		Play				
	Pause		Pause				
	>>		>>				
	I<</Cancel		I<<				
	>>I/SubPg		>>I				
	Stop/Index		Stop				
	Tv/Radio		TV/R				
	Subtitle		Subt				
	Size		Format				
	Reveal		List				
	Hold		D. Menu				

