




 




 


 


 
 

 



 
 


 



 



 



 



 



 


 
 


 
 


 



 





Original		Rechange		Original		Rechange	
	Power		Power		Play		Play
	Premium On		Smart		Pause		Pause
	Guida		Guide		>>		>>
	Menu		Menu		<<		<<
	Info		Info		1		1
	Vol+		Vol +		2		2
	Vol-		Vol -		3		3
	P+		Ch +		4		4
	P-		Ch -		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	OK		Ok		0		0
	Back		Back		Lista		List
	Exit		Exit		Opzioni		Options
	Stop		Stop		Red		Red





	Original	Rechange	Original	Rechange
	Green	 B		
	Yellow	 C		
	Blue	 D		
	Text	 REPEAT TEXT		
	APP	 APP MEDIA		
	Recall	 FAV PRE-CH		

