



 
 
 
 
 


 

 
 







 
 


 



 
 


 
 
 

 
 
 

 

 
 


 

 



 








 








Original	Rechange	Original	Rechange
 Power	 Power	 Blue	 Blue
 PREMIUM NET	 Smart	 Back	 Back
 Guida	 Guide	 Exit / Stop	 Exit
 Menu	 Menu	 Exit / Stop	 Stop
 Info	 Info	 << REW	 <<
 Vol +	 Vol +	 >> FWD	 >>
 Vol -	 Vol -	 Pause / Play	 Play
 P +	 Ch +	 Pause / Play	 Pause
 P -	 Ch -	 1	 1
 Up	 Up	 2	 2
 Left	 Left	 3	 3
 OK	 Ok	 4	 4
 Right	 Right	 5	 5
 Down	 Down	 6	 6
 Red	 Red	 7	 7
 Green	 Green	 8	 8
 Yellow	 Yellow	 9	 9





Original	Rechange
 0	 0
 Lista	 List
 Opzioni	 Options
 Text	 Text
 TV / Rad	 TV/R
 APP	 Shift + Media
 Source	 AV
 I<< Prev	 I<<
 Rec	 Rec
 File	 Media
 >>I Next	 >>I

Original	Rechange

