 

 

 


 
 

 
 



 
 


 
 


 
 




 



 



 





 
 
 

 
 
 

 
 
 

 
 
 

 
 
 


 








Original	Recharge	Original	Recharge
 Power Xbox	 Power	 Up	 Up
 Power Tv	 +  Shift + Power	 Down	 Down
 World	 Media	 Right	 Right
 Yellow/Y	 Yellow	 Left	 Left
 Blue/X	 Blue	 Guide	 Guide
 Green/A	 Green	 Back	 Back
 Red/B	 Red	 Vol+	 Vol +
 Play	 Play	 Vol-	 Vol -
 Pause	 Pause	 CH/PG+	 Ch +
 >>	 >>	 CH/PG-	 Ch -
 <<	 <<	 Mute	 Mute
 I<	 I<<	 Last	 Pre Ch
 >I	 >>I	 Line Tv	 TV/R
 Menu	 Menu	 Input	 AV
 Info	 Info	 Disp	 List
 Rec	 Rec	 1	 1
 OK	 Ok	 2	 2





Original		Recharge		Original		Recharge	
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				

