





Original	Rechange
 Standby	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Rechange
 Tv/Radio	 TV/Radio /
 Display	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 EPG	 Guide / EPG / -/--
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Media	 Shift + Display / Media
 Media	 Setup / OPT /
 CH-	 CH- / Page-





Original	Rechange	Original	Rechange
Rec	Rec / Rec Mode	Red	Red / Netflix / Search
T.Shift	Info / Angle	Green	Green / APP / Repeat
I/II/Audio	Audio / Lang I/II	Yellow	Yellow / YouTube / Repeat
Size/Aspect	Zoom / Size	Blue	Blue / Prime Video / Random
Text	Text / Goto		
Reveal	D.Menu / Top		
Hold	+  Shift + Stop /		
Subpage	Eject / Surround		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
Index/Rec List	Smart / List		
Subtitle	Subtitle / EQ		
<<	<< / Tune-		
>>	>> / Tune+		
I<<	I<< / Preset-		
>>I/Mix	>>I / Preset+		

Original	Rechange
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

