




 
 


 



 


 


 




Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 TV	 AUX
 MUTE	 MUTE	 DVD	 REC MODE
 1	 1	 SAT	 PLAY MODE
 2	 2	 AUX	 II
 3	 3	 SOUND	 ■
 4	 4	 AD	 ●
 5	 5	 SETTINGS	 <<<
 6	 6	 LIST	 <<
 7	 7	 DUAL	 >>
 8	 8	 SUBT	 <<<
 9	 9	 OPT	 <<
 0	 0	 ECO	 SEARCH
 FAV	 Shift + Pre Ch	 PICTURE	 TV/R
 Recall	 Pre Ch	 FORMAT	 SLEEP
 Game	 Media	 3D	 E-MANUAL
 Auto	 Smart	 TIMER	 REPEAT
 Info	 Info	 AV	 ZOOM
		 D.MENU	 TEXT
		 TOP MENU	 ▲
		 MENU	 OK
		 INFO	 ▼
		 CLEAR	 ◀
		 EXIT	 ▶
		 HOME	 RETURN
		 SMART	 BACK
		 APP	 + VOL
		 MEDIA	 CH -
		 VOL +	 1
		 CH -	 2
		 1	 3
		 2	 4
		 3	 5
		 4	 6
		 5	 7
		 6	 8
		 7	 9
		 8	 0
		 9	 FAV
		 0	 GUIDE
		 FAV	 PRE-CH
		 GUIDE	 A
		 PRE-CH	 B
		 A	 C
		 B	 D
		 C	
		 D	



Play/Pause

