



Original	Rechange
Power	Power
DTV/VCR	AV / Input / RDS
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Info	Info / Angle
0	0
Recall	Back / Return
Menu	Menu / Home
EPG	Guide / EPG / -/--

Original	Rechange
Page+	CH+ / Page+
Exit	Exit / Cancel / Clear
FAV	Fav / Marker / PC
Page-	CH- / Page-
Up/CH+	Up
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
Down/CH-	Down
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Audio	Audio / Lang I/II
Blue	Blue / Prime Video / Random
Pause	Pause / Step / Freeze





Original		Rechange		Original		Rechange	
	TTX		Text / Goto				
	Subtitle		Subtitle / EQ				
	Tv/Radio		TV/Radio /				

