


 

 





 

 

 



 



 

 





 
 











 
 



 



 



 









 




Original		Recharge		Original		Recharge	
	Power		Power		6		6
	Mute		Mute		7		7
	[<>]		Format		8		8
	♪		Dual		9		9
	[]		3D		0		0
	PAT		Smart		Zoom		Eject
	PIP Sel		Play		Swap		Pre Ch
	PIP Pos		Pause		Swap		Back
	PIP Size		Stop		PR-		Ch -
	AV		AV		PR+		Ch +
	PC		Media		Vol-		Vol -
	TV		TV/R		Vol+		Vol +
	1		1		Up		Up
	2		2		Right		Right
	3		3		Down		Down
	4		4		Left		Left
	5		5		OK / Freeze		Ok





Original	Recharge	Original	Recharge
	Info		
MENU	MENU		
	OPT Options		
	D.MENU D. Menu		
	SUBT Subt		
	A Red		
	B Green		
	C Yellow		
	D Blue		
	TEXT Text		
	EXIT Exit		
	GUIDE Guide		

