



 




 
 





 

 







Original	Rechange
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
	Menu / Home
	Info / Angle
	Audio / Lang I/II

Original	Rechange
	Mute / Dimmer
	Left
	Up
	Right
	OK
	Down
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Red / Netflix / Search
	Red / Sound / Title
	Green / APP / Repeat
	Green / Picture / Format
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto





	Original	Recharge	Original	Recharge
	[≡o]	TIMER SLEEP Sleep / Timer		
	Hold	HOLD Stop / Hold		
	[≡X]	CLEAR EXIT Exit / Cancel / Clear		
	Mix / PIP Swap	LIST SMART Smart / List		
	PIP / Size	SIZE ZOOM Zoom / Size		
	PIP Down / [≡?]	PRESET- I<< / Preset-		
	PIP Up / Index	PRESET+ >>I / Preset+		
	[TV]	PROGRAM TV/RADIO TV/Radio /		
	[AV]	RDS AV INPUT AV / Input / RDS		

