





 
 

 
 

 

 


 
 
 


| Original | Recharge | Original | Recharge |
|--------------|---|------------|---|
| On/Off |  Power | Return |  Back |
| Audio Off |  Mute | Display |  Info |
| Slow Down |  Ch - | OK Enter |  Ok |
| Stop |  Stop | Menu Right |  Right |
| Slow Up |  Ch + | Menu Down |  Down |
| Auto/Track |  Smart | 1 |  1 |
| Subt. |  Subt | 2 |  2 |
| Title |  List | 3 |  3 |
| Pause |  Pause | 4 |  4 |
| Rep/A-B |  Shift + Text | Next |  >> |
| Zoom |  Shift + Eject | Pbc |  Media |
| Repeat/1/All |  Text | Game |  Vol - |
| DVD/TV |  AV | Top Menu |  D. Menu |
| Menu |  Menu | Prev. |  << |
| Menu Up |  Up | 5 |  5 |
| Menu Left |  Left | 6 |  6 |
| Progr. |  Sleep | 7 |  7 |



| Original | Recharge | Original | Recharge |
|------------|---|----------|----------|
| 8 |  | 8 | |
| 9 |  | 9 | |
| +10 |  | Guide | |
| 0 |  | 0 | |
| C/CH |  | Pre Ch | |
| Setup |  | Options | |
| Open/Close |  | Eject | |
| Mark |  +  Shift + 7 | | |
| Play |  | Play | |
| Rewind |  | << | |
| Record |  | Rec | |
| Digest |  | Vol + | |
| 3D |  | 3D | |
| Audio |  | Dual | |
| F.Forward |  | >> | |
| Angle |  | Format | |
| | | | |

