













 


 











 


 

 



 


 








 



















 





 




Original	Rechange	Original	Rechange
 Power	 Power	 Vol+	 Vol+
 Mute	 Mute / Dimmer	 CH-	 CH- / Page-
 1	 1	 I-II	 Audio / Lang I/II
 2	 2	 Vol-	 Vol-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK/Select	 OK
 6	 6	 Right	 Right
 7	 7	 Menu	 Menu / Home
 8	 8	 Down	 Down
 9	 9	 TV/DTV	 TV/Radio /
 AV/Source	 AV / Input / RDS	 Red	 Red / Netflix / Search
 0	 0	 Green	 Green / APP / Repeat
 Exit	 Exit / Cancel / Clear	 Yellow	 Yellow / YouTube / Repeat
 -/--	 Shift + Guide / EPG / -/--	 Blue	 Blue / Prime Video / Random
 CH+	 CH+ / Page+	 [≡]/Text	 Text / Goto
 [i]/Info	 Info / Angle	 [≡o]	 Sleep / Timer

Original	Rechange	Original	Rechange
 Power	 Power	 TV	 TV
 Mute	 Mute	 DVD	 DVD
 1	 1	 SAT	 SAT
 2	 2	 AUX	 AUX
 3	 3	 SLOW	 SLOW
 4	 4	 STEP-FREEZE	 STEP-FREEZE
 5	 5	 HOLD	 HOLD
 6	 6	 REC MODE	 REC MODE
 7	 7	 TUNE-	TUNE-
 8	 8	 TUNE+	TUNE+
 9	 9	 PRESET-	PRESET-
 0	 0	 PRESET+	PRESET+
 AV	 AV	 TITLE	TITLE
 INFO	 INFO	 LANG I/II	 LANG I/II
 MUTE	 MUTE	 EQ	EQ
 SOUND	SOUND	 SURROUND	SURROUND
AUDIO	AUDIO	SLEEP	SLEEP
SUBTITLE	SUBTITLE	PROGRAM	PROGRAM
TIMER	TIMER	TV RADIO	TV RADIO
PICTURE	PICTURE	RDS	RDS
ZOOM	ZOOM	AV INPUT	AV INPUT
SLEEP	SLEEP	HOME	HOME
TV RADIO	TV RADIO	ANGLE	ANGLE
TOP MENU	TOP MENU	MENU	MENU
OPT-TOOLS	OPT-TOOLS	OK	OK
GOTO	GOTO	RETURN	RETURN
TEXT	TEXT	EXIT	EXIT
SLEEP	SLEEP	CANCEL	CANCEL
HOME	HOME	LIST	LIST
ANGLE	ANGLE	SMART	SMART
MENU	MENU	MEDIA	MEDIA
OK	OK	DISPLAY	DISPLAY
RETURN	RETURN	CH PAGE	CH PAGE
EXIT	EXIT	TV	TV
CANCEL	CANCEL	DVD	DVD
LIST	LIST	CD - STB	CD - STB
SMART	SMART	VIDEO	VIDEO
MEDIA	MEDIA	TAPE	TAPE
DISPLAY	DISPLAY	TUNER	TUNER
CH PAGE	CH PAGE	AUX - HDD	AUX - HDD
TV	TV	USB	USB
DVD	DVD	BLUETOOTH	BLUETOOTH
CD - STB	CD - STB	7	7
VIDEO	VIDEO	8	8
TAPE	TAPE	9	9
TUNER	TUNER	0	0
AUX - HDD	AUX - HDD	HDMI - BAT	HDMI - BAT
USB	USB	FC	FC
BLUETOOTH	BLUETOOTH	FAV MARKER	FAV MARKER
7	7	NETFLIX	NETFLIX
8	8	APP	APP
9	9	YouTube	YouTube
0	0	Prime Video	Prime Video
HDMI - BAT	HDMI - BAT	SEARCH	SEARCH
FC	FC	REPEAT	REPEAT
FAV MARKER	FAV MARKER	REPEAT A-B	REPEAT A-B
NETFLIX	NETFLIX	RANDOM	RANDOM
APP	APP	GOTO	GOTO
YouTube	YouTube	TEXT	TEXT
Prime Video	Prime Video	TIMER	TIMER
SEARCH	SEARCH	SLEEP	SLEEP
REPEAT	REPEAT	 Mandis SHOP	 Mandis SHOP
REPEAT A-B	REPEAT A-B	 www.mand	

