



 

 



 





 

 



 














Original	Recharge
 Power	 Power
 DVD	 Shift + 2
 STB	 Shift + 3
 HTS	 TV/Radio /
 Red / Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow / [I]	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Home	 Menu / Home
 Guide	 Guide / EPG / -/--
 Options	 Setup / OPT /
 Options	 Shift + Setup / OPT / Tools
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK

Original	Recharge
 Back	 Back / Return
 Back	 Fav / Marker / PC
 Info	 Info / Angle
 << / Tune-	 << / Tune-
 <<	 I<< / Preset-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 >>	 >>I / Preset+
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Vol +	 Vol+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 P +	 CH+ / Page+
 P -	 CH- / Page-
 [<I>] / Format	 Picture / Format





Original		Rechange		Original		Rechange	
	Net TV	+ 1	Shift + 1				
	Teletext		Text / Goto				
	Disc Menu		D.Menu / Top				
	1	1	1				
	2	2	2				
	3	3	3				
	4	4	4				
	5	5	5				
	6	6	6				
	7	7	7				
	8	8	8				
	9	9	9				
	0	0	0				
	Subtitle		Subtitle / EQ				
	Source		AV / Input / RDS				
	Ambilight		Smart / List				

