



| Original   | Recharge  |
|--|---|
|  Standby - On |  Power       |
|  Rec          |  Shift + Rec |
|  1            |  1           |
|  2            |  2           |
|  3            |  3           |
|  4            |  4           |
|  5            |  5           |
|  6            |  6           |
|  7            |  7           |
|  8            |  8           |
|  9            |  9           |
|  0            |  0           |
|  Return      |  Back       |
|  T/C        |  Text      |
|  CH+        |  Ch +      |
|  CH-        |  Ch -      |
|  Volume+    |  Vol +     |

| Original  | Recharge  |
|---|---|
|  Volume-   |  Vol -   |
|  HDD       |  Red     |
|  DVD       |  Green   |
|  TUNER     |  Yellow  |
|  DV        |  Blue    |
|  Select    |  Media   |
|  TV/DVD    |  Smart   |
|  Source    |  AV      |
|  DVD Rec   |  Rec     |
|  I<< Prev  |  I<<     |
|  I<< Prev  |  <<      |
|  >>I Next  |  >>I     |
|  >>I Next |  >>     |
|  Shuffle |  TV/R  |
|  Zoom    |  Eject |
|  Stop    |  Stop  |
|  Play    |  Play  |

 
 










 
 
 








 




 




 

 






 




 

 

 
 


 



 

 


 

 

 
 
| Original     | Recharge  |               |
|--------------|---|---------------|
| On/Off       |    | Power         |
| Prev         |    | Ch -          |
| Slow Down    |    | Shift + Left  |
| Next         |    | Ch +          |
| Audio Off    |    | Mute          |
| Title        |    | List          |
| Slow Up      |    | Shift + Right |
| Subt.        |    | Subt          |
| Auto/Track   |    | Shift + 3D    |
| Rep/A-B      |    | Shift + Text  |
| Menu         |  | Menu          |
| Stop         |  | Stop          |
| Repeat/1/All |  | Text          |
| Menu Up      |  | Up            |
| Pause        |  | Pause         |
| Zoom         |  | Eject         |
| DVD/TV       |  | Smart         |

| Original    | Recharge  |              |
|-------------|---|--------------|
| Menu Left   |    | Left         |
| OK Enter    |    | Ok           |
| Return      |    | Back         |
| Menu Right  |    | Right        |
| Progr.      |    | Sleep        |
| Display     |    | Shift + Info |
| Menu Down   |    | Down         |
| Volume+     |    | Vol +        |
| Next        |    | >>           |
| Top Menu    |    | D. Menu      |
| Volume-     |   | Vol -        |
| 1           |  | 1            |
| Prev.       |  | <<           |
| 2           |  | 2            |
| Syst.Preset |  | Exit         |
| 3           |  | 3            |
| 4           |  | 4            |





| Original  | Recharge  | Original        | Recharge |
|-----------|---|-----------------|----------|
| 5         |    | 5               | 5        |
| Digest    |  +      | Shift + List    |          |
| 6         |    | 6               | 6        |
| Auto Scan |  +      | Shift + Options |          |
| Remain    |  +      | Shift + Smart   |          |
| 7         |    | 7               | 7        |
| Timer     |  +      | Shift + AV      |          |
| Angle     |    | Format          |          |
| Pbc       |    | Yellow          |          |
| Random    |  +      | Shift + TV/R    |          |
| Shuffle   |  +    | Shift + D. Menu |          |
| Key-      |  +  | Shift + Down    |          |
| 8         |    | 8               | 8        |
| 9         |    | 9               | 9        |
| Setup     |    | Options         |          |
| Mode      |  +  | Shift + Media   |          |
| Video     |    | AV              |          |

| Original     | Recharge  | Original      | Recharge |
|--------------|---|---------------|----------|
| Resume       |  +      | Shift + Ok    |          |
| Key+         |  +      | Shift + Up    |          |
| Record       |    | Rec           |          |
| Game         |    | Media         |          |
| R/L          |    | Red           |          |
| Np           |    | Green         |          |
| Audio        |  +      | Shift + Dual  |          |
| Play         |    | Play          |          |
| +10          |    | Guide         |          |
| Karaoke/Step |  +      | Shift + Pause |          |
| Play/Back    |  +    | Shift + Play  |          |
| Echo+        |  +  | Shift + Ch +  |          |
| Info         |    | Info          |          |
| Echo-        |  +  | Shift + Ch -  |          |
| Rewind       |    | <<            |          |
| 0            |    | 0             |          |
| C/CH         |    | Pre Ch        |          |





