
 



 







 















 











 

















Original	Rechange
 Power	 Power
 PP	 Back / Return
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 P<P	 Fav / Marker / PC
 0	 0
 --	 Guide / EPG / --
 Info	 Info / Angle
 I-II	 Audio / Lang I/II

Original	Rechange
 Up	 Up
 P+	 CH+ / Page+
 Left	 Left
 M	 OK
 M	 Menu / Home
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Vol-	 Vol-
 Vol+	 Vol+
 Red/Sound	 Red / Netflix / Search
 Red/Sound	 Sound / Title
 Green/Picture	 Green / APP / Repeat
 Green/Picture	 Picture / Format
 Yellow/Feature	 Yellow / YouTube / Repeat
 Blue/Install	 Blue / Prime Video / Random
 TV	 Display / Media



