



Original		Rechange		Original		Rechange	
	Power		Power		Input		AV / Input / RDS
	Mute		Mute / Dimmer		Info		Info / Angle
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Menu		Menu / Home
	6		6		Down		Down
	7		7		Exit		Exit / Cancel / Clear
	8		8		Vol+		Vol+
	9		9		FAV		Fav / Marker / PC
	-/--		Shift + Guide / EPG / -/--		CH+		CH+ / Page+
	0		0		Vol-		Vol-
	Recall		Back / Return		P.Mode		Picture / Format
	Sleep		Sleep / Timer		CH-		CH- / Page-
	Audio		Audio / Lang I/II		S.Mode		Sound / Title
	Aspect		Zoom / Size		Red		Red / Netflix / Search





Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Home	Shift + Menu /
Setup	Setup / OPT /
Mouse	Display / Media
EPG	Guide / EPG / -/--
Text	Text / Goto
Stop/Reveal	Stop / Hold
Play	Play / Slow
Pause/Mix/T	Pause / Step / Freeze
Index	Smart / List
<</Hold	<< / Tune-
>>/Subpage	>> / Tune+
I<</Size	I<< / Preset-
>>I/Cancel	>>I / Preset+
Sub-T	Subtitle / EQ

Original	Recharge
Rec	Rec / Rec Mode
Netflix	Shift + Red / Netflix /
You Tube	Shift + Yellow / YouTube /

