

 

 
 



 














 
 

 

 
 
 
 


 
 


 
 







 
 



 


 

 












Original	Recharge	Original	Recharge
 Power	 Power	 Eco	 3D
 Sleep	 Sleep	 Vol+	 Vol +
 CBL/SAT	 1	 Vol-	 Vol -
 DVD	 2	 Mute	 Mute
 Blu-ray	 3	 CH/Page+	 Ch +
 Game	 4	 CH/Page-	 Ch -
 AUX1	 5	 Info	 Info
 Media Player	 6	 Option	 Options
 TV/Audio	 7	 Back	 Back
 AUX2	 8	 Setup	 Menu
 Tuner	 9	 Up	 Up
 iPod/USB	 Guide	 Down	 Down
 CD	 0	 Right	 Right
 Bluetooth	 Pre Ch	 Left	 Left
 Online Music	 Media	 Enter	 Ok
 Phono	 Smart	 I<</Tune-	 I<<
 Internet/Radio	 TV/R	 Play	 Play




 




 
 

 






 

 
 

 



 


 
 


Original	Recharge	Original	Recharge
 Eco	 3D	 Eco	 3D
 Vol+	 Vol +	 Vol+	 Vol +
 Vol-	 Vol -	 Vol-	 Vol -
 Mute	 Mute	 Mute	 Mute
 CH/Page+	 Ch +	 CH/Page+	 Ch +
 CH/Page-	 Ch -	 CH/Page-	 Ch -
 Info	 Info	 Info	 Info
 Option	 Options	 Option	 Options
 Back	 Back	 Back	 Back
 Setup	 Menu	 Setup	 Menu
 Up	 Up	 Up	 Up
 Down	 Down	 Down	 Down
 Right	 Right	 Right	 Right
 Left	 Left	 Left	 Left
 Enter	 Ok	 Enter	 Ok
 I<</Tune-	 I<<	 I<</Tune-	 I<<
 Play	 Play	 Play	 Play









Original	Rechange
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX1	 5
 Media Player	 6
 TV/Audio	 7
 AUX2	 8
 Tuner	 9
 iPod/USB	 Guide
 CD	 0
 Bluetooth	 Pre Ch
 Online Music	 Media
 Phono	 Smart
 Internet Radio	 TV/R

Original	Rechange
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Back	 Back
 I<</Tune-	 I<<
 Play	 Play
 Pause	 Pause
 Tune+ / >> I	 >> I
 Smart Select 1	 D. Menu
 Smart Select 2	 Text



