



| Original   | Recharge  |
|--|---|
|  Power          |  Power             |
|  Preview        |  Fav / Marker / PC |
|  Mute           |  Mute / Dimmer     |
|  1              |  1                 |
|  2              |  2                 |
|  3              |  3                 |
|  4              |  4                 |
|  5              |  5                 |
|  6              |  6                 |
|  7              |  7                 |
|  8             |  8                |
|  9            |  9               |
|  Return/Title |  Back / Return   |
|  0            |  0               |
|  Display      |  Display / Media |
|  I<<          |  I<< / Preset-   |
|  >>I          |  >>I / Preset+   |

| Original   | Recharge  |
|--|---|
|  Play         |  Play / Slow                 |
|  Stop         |  Stop / Hold                 |
|  Pause        |  Pause / Step / Freeze       |
|  Up           |  Up                          |
|  Left         |  Left                        |
|  OK           |  OK                          |
|  Right        |  Right                       |
|  Disc Menu    |  D.Menu / Top                |
|  Down         |  Down                        |
|  System Menu  |  Menu / Home                 |
|  Subtitle    |  Subtitle / EQ              |
|  Angle      |  Info / Angle              |
|  Zoom       |  Zoom / Size               |
|  Repeat     |  Green / APP / Repeat      |
|  Repeat A-B |  Yellow / YouTube / Repeat |
|  Audio      |  Audio / Lang I/II         |

