 
 



 
 
 
 
 







 
 


 
 
 


 

 








Original		Rechange		Original		Rechange	
	Power		Power		CH/Page-		Ch -
	Sleep		Sleep		Eco		3D
	CBL/SAT		1		Vol+		Vol +
	DVD		2		Vol-		Vol -
	Blu-ray		3		Mute		Mute
	Game		4		Info		Info
	AUX1		5		Option		Options
	Media Player		6		Up		Up
	TV/Audio		7		Down		Down
	AUX2		8		Right		Right
	Tuner		9		Left		Left
	USB		Guide		Enter		Ok
	CD		0		Back		Back
	Bluetooth		Pre Ch		Setup		Menu
	Internet Radio		Smart		I<</Tune-		I<<
	CH/Page+		Ch +		Play		Play
					Pause		Pause





Original	Rechange
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX1	 5
 Media Player	 6
 TV Audio	 7
 AUX2	 8
 Tuner	 9
 USB	 Guide
 CD	 0
 Bluetooth	 Pre Ch
 Internet Radio	 Smart
 CH/Page+	 Media
CH/Page-	Ch +

Original	Rechange
 CH/Page-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Back	 Back
 I<</Tune-	 I<<
 Play	 Play
 Pause	 Pause
 >>I/Tune+	 >>I
 Smart Select 1	 D. Menu
 Smart Select 2	 Text
Smart Select 3	Eject



