



Original	Recharge
Power On	Power
Power Off	Shift + Power
Dimm/Dimmer	Mute / Dimmer
Open/Close	Eject / Surround
A-B/Repeat A-B	Shift + Yellow / YouTube / YouTube /
1	1
2	2
3	3
Repeat	Shift + Green / APP / APP /
4	4
5	5
6	6
Rand/Random	Shift + Blue / Prime
7	7
8	8
9	9
Zoom	Zoom / Size

Original	Recharge
Clear	Exit / Cancel / Clear
0	0
Search Mode	Shift + Red / Netflix /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Menu/Popup	Menu / Home
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Setup	Setup / OPT /
Return	Back / Return
Angle	Info / Angle





Original	Recharge	Original	Recharge
 Subtitle	 Subtitle / EQ		
 Audio	 Audio / Lang I/II		
 Pure Direct	 +  Shift + Smart / List		
 Display	 Display / Media		
 Mode	 Smart / List		
 I<< Skip	 I<< / Preset-		
 Skip >>I	 >>I / Preset+		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 <<	 << / Tune-		
 Still/Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		

