 




 

 

 

 





 
 
 






 


 








| Original   | Rechange   |
|--|--|
|  Power            |  Power    |
|  Sleep            |  Sleep    |
|  CBL/SAT          |  1        |
|  DVD              |  2        |
|  Blu-ray          |  3        |
|  Game             |  4        |
|  AUX1             |  5        |
|  Media Player     |  6        |
|  TV Audio         |  7        |
|  AUX2            |  8       |
|  Tuner          |  9      |
|  iPod/USB       |  Guide  |
|  CD             |  0      |
|  Bluetooth      |  Pre Ch |
|  Online Music   |  Smart  |
|  Internet Radio |  Media  |
|  CH/Page+       |  Ch +   |


 

 

 


 










| Original  | Rechange  |
|---|---|
|  CH/Page-    |  Ch -    |
|  Eco         |  3D      |
|  Vol+        |  Vol +   |
|  Vol-        |  Vol -   |
|  Mute        |  Mute    |
|  Info        |  Info    |
|  Option      |  Options |
|  Back        |  Back    |
|  Setup       |  Menu    |
|  Up         |  Up     |
|  Down      |  Down  |
|  Right     |  Right |
|  Left      |  Left  |
|  Enter     |  Ok    |
|  I<</Tune- |  I<<   |
|  Play      |  Play  |
|  Pause     |  Pause |









| Original  |                | Rechange  |        | Original  |                | Rechange  |           |
|---|----------------|---|--------|---|----------------|---|-----------|
|    | Power          |    | Power  |    | CH/Page-       |    | Ch -      |
|    | Sleep          |    | Sleep  |    | Vol+           |    | Vol +     |
|    | CBL/SAT        |    | 1      |    | Vol-           |    | Vol -     |
|    | DVD            |    | 2      |    | Mute           |    | Mute      |
|    | Blu-ray        |    | 3      |    | Back           |    | Back      |
|    | Game           |    | 4      |    | Up             |    | Up        |
|    | AUX1           |    | 5      |    | Down           |    | Down      |
|    | Media Player   |    | 6      |    | Right          |    | Right     |
|    | TV Audio       |    | 7      |    | Left           |    | Left      |
|   | AUX2           |   | 8      |   | Enter          |   | Ok        |
|  | Tuner          |  | 9      |  | I<</Tune-      |  | I<<       |
|  | iPod/USB       |  | Guide  |  | >>I/Tune+      |  | I>>       |
|  | CD             |  | 0      |  | Play           |  | Play      |
|  | Bluetooth      |  | Pre Ch |  | Pause          |  | Pause     |
|  | Online Music   |  | Smart  |  | Smart Select 1 |  | Shift + 1 |
|  | Internet Radio |  | Media  |  | Smart Select 2 |  | Shift + 2 |
|  | CH/Page+       |  | Ch +   |  | Smart Select 3 |  | Shift + 3 |



