



 





 





 

 


 

 







 







 

 


 








Original	Rechange	Original	Rechange
 AMP Power	 Power	 Vol-	 Vol -
 Power	 Shift + Power	 Mute	 Mute
 CD	 Yellow	 Time/Top Menu	 Menu
 Tuner	 Green	 Mode	 Back
 Network	 Media	 Prog/Favorites	 Pre Ch
 Phono	 Smart	 Setup	 Options
 AUX	 Red	 Up	 Up
 Recorder	 Blue	 Down	 Down
 I<<	 I<<	 Right	 Right
 >>I	 >>I	 Left	 Left
 Stop	 Stop	 Enter	 Ok
 Play	 Play	 1	 1
 Pause	 Pause	 2	 2
 Input	 AV	 3	 3
 Info	 Info	 4	 4
 Source Direct	 3D	 5	 5
 Vol+	 Vol +	 6	 6



 
 


 




Original		Rechange	
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Clear		Exit
	Dimmer		Format
	Random		Subt
	Repeat		Text
	Search		TV/R

Original		Rechange	





Original	Recharge	Original	Recharge
 AMP Power	 Power	 Vol+	 Vol +
 Power	 Shift + Power	 Vol-	 Vol -
 CD	 Yellow	 Mute	 Mute
 Tuner	 Green	 Time/Top Menu	 Menu
 Network	 Media	 Mode	 Back
 Phono	 Smart	 Prog/Favorites	 Pre Ch
 AUX	 Red	 Setup	 Options
 Recorder	 Blue	 Up	 Up
 I<<	 I<<	 Down	 Down
 Sound Mode	 Dual	 Right	 Right
 >>I	 >>I	 Left	 Left
 Stop	 Stop	 Enter	 Ok
 Play	 Play	 1	 1
 Pause	 Pause	 2	 2
 Input	 AV	 3	 3
 Info	 Info	 4	 4
 Source Direct	 3D	 5	 5





	Original	Rechange	Original	Rechange
MNO 6	6	6		
PQRS 7	7	7		
TUV 8	8	8		
WXYZ 9	9	9		
0	0	0		
+10	+10	GUIDE		
CLEAR	Clear	EXIT		
DIMMER	Dimmer	PICTURE FORMAT		
RANDOM	Random	AD SUBT		
REPEAT	Repeat	REPEAT TEXT		

