




Original	Rechange	Original	Rechange
 Power	 Power	 Pause	 Pause
 CH/Page+	 Ch +	 Stop	 Stop
 CH/Page-	 Ch -	 Home	 Smart
 Sleep	 Sleep	 >>I/Tune+	 >>I
 Mute	 Mute	 I<</Tune-	 I<<
 Volume+	 Vol +	 >>	 >>
 Volume-	 Vol -	 <<	 <<
 Info	 Info	 Green/Movie	 Green
 Option	 Options	 Red/Music	 Red
 Setup	 Menu	 Blue/Game	 Blue
 Back	 Back	 Yellow/Pure	 Yellow
 Up	 Up	 1	 1
 Enter	 Ok	 2	 2
 Down	 Down	 3	 3
 Right	 Right	 4	 4
 Left	 Left	 5	 5
 Play	 Play	 6	 6







 
 
 
 

 

 





Original	Recharge
7	7
8	8
9	9
0	0
Smart Select 1	Text
Smart Select 2	AV
Smart Select 3	Format
Smart Select 4	3D
TV Audio	TV/R
CBL/SAT	Shift + 1
DVD	Shift + 2
Blu-ray	Shift + 3
AUX1	Shift + 4
Tuner	Shift + 5
Bluetooth	Shift + 6
Game	Shift + 7
Phono	Shift + 9

Original	Recharge
AUX2	Shift + 8
USB	Guide
Media Player	Shift + Guide
Internet Radio	Pre Ch
CD	Shift + 0
Heos (Online)	Shift + Pre Ch



 



 



 

 
 

 

 
 


 



 

 

 



 
 
 
 




 



 
 


 
 

 
 
 


 



 


 






Original	Rechange	Original	Rechange
 Power	 Power	 >>	 >>
 CH/Page+	 Ch +	 <<	 <<
 CH/Page-	 Ch -	 >> /Tune+	 >>
 Sleep	 Sleep	 <</Tune-	 <<
 Mute	 Mute	 1	 1
 Volume+	 Vol +	 2	 2
 Volume-	 Vol -	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Smart Select 1	 Text
 Pause	 Pause	 Smart Select 2	 AV
 Play	 Play	 Smart Select 3	 Format





Original	Rechange	Original	Rechange
 Power	 Power	 >> /Tune+	 >>
 CH/Page+	 Ch +	 <</Tune-	 <<
 CH/Page-	 Ch -	 <<	 <<
 Sleep	 Sleep	 >>	 >>
 Mute	 Mute	 1	 1
 Volume+	 Vol +	 2	 2
 Volume-	 Vol -	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Smart Select 1	 Text
 Pause	 Pause	 Smart Select 2	 AV
 Play	 Play	 Smart Select 3	 Format





Original		Recharge	
4	Smart Select 4	ECO 3D	3D
TV AUDIO	TV Audio	SEARCH TV/R	TV/R
MEDIA PLAYER	Media Player	SHIFT +	Shift + Guide
INTERNET RADIO	Internet Radio	FAV PRE-CH	Pre Ch
CBL/SAT	CBL/SAT	SHIFT +	Shift + 1
DVD	DVD	SHIFT +	Shift + 2
Blu-ray	Blu-ray	SHIFT +	Shift + 3
AUX1	AUX1	SHIFT +	Shift + 4
TUNER	Tuner	SHIFT +	Shift + 5
Bluetooth	Bluetooth	SHIFT +	Shift + 6
GAME	Game	SHIFT +	Shift + 7
AUX2	AUX2	SHIFT +	Shift + 8
PHONO	Phono	SHIFT +	Shift + 9
USB	USB		Guide
CD	CD	SHIFT +	Shift + 0
Internet Radio	Online Music	SHIFT +	Shift + Pre Ch

Original	Recharge

