



Original		Recharge		Original		Recharge	
	Power		Power		Sleep		Sleep / Timer
	CBL/SAT		Shift + 0		Volume+		Vol+
	DVD		Shift + 2		CH/Page-		CH- / Page-
	TV Audio		Shift + 1		Mute		Mute / Dimmer
	Blu-ray		Shift + 5		Volume-		Vol-
	AUX1		Shift + 7		Eco		D.Menu / Top
	Tuner		Shift + 6		Info		Info / Angle
	Bluetooth		Shift + 9		Up		Up
	Game		Shift + Fav / Marker / PC		Option		Shift + Setup / OPT / Tools
	AUX2		Shift + Guide / EPG / -/-		Left		Left
	Phono		Shift + 4		Right		Right
	USB		Shift + 8		Back		Back / Return
	Media Player		Display / Media		Down		Down
	CD		Shift + 3		Setup		Setup / OPT /
	Online Music		Smart / List		Home		Menu / Home
	Internet Radio		Shift + Smart / List		Stop		Stop / Hold
	CH/Page+		CH+ / Page+		Pause		Pause / Step / Freeze





Original		Recharge		Original		Recharge	
	Play		Play / Slow		3		3
	I<</Tune-		I<< / Preset-		4		4
	I<</Tune-		Shift + << /		5		5
	>>I/Tune+		>>I / Preset+		6		6
	>>I/Tune+		Shift + >> /		7		7
	<<		<< / Tune-		8		8
	>>		>> / Tune+		9		9
	Smart Select 1		Shift + Red / Netflix /		0		0
	Smart Select 2		Shift + Green / APP /		Enter		OK
	Smart Select 3		Shift + Yellow / YouTube /				
	Smart Select 4		Shift + Blue / Prime				
	Green/Movie		Green / APP / Repeat				
	Red/Music		Red / Netflix / Search				
	Blue/Game		Blue / Prime Video / Random				
	Yellow/Pure		Yellow / YouTube / Repeat				
	1		1				
	2		2				





Original	Rechange
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Rechange
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original	Recharge
>>/Tune+	+ Shift + >>/
<<	<< / Tune-
>>	>> / Tune+
Smart Select 1	Red / Netflix / Search
Smart Select 2	Green / APP / Repeat
Smart Select 3	Yellow / YouTube / Repeat
Smart Select 4	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Recharge
Enter	OK





Original	Rechange
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Rechange
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





	Original	Recharge	Original	Recharge
	>>/Tune+	+ Shift + >> /	Enter	OK
	<<	<< / Tune-		
	>>	>> / Tune+		
	Smart Select 1	Red / Netflix / Search		
	Smart Select 2	Green / APP / Repeat		
	Smart Select 3	Yellow / YouTube / Repeat		
	Smart Select 4	Blue / Prime Video / Random		
	1	1		
	2	2		
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	0	0		

