



Original	Recharge
 Power	 Power
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 Tv Audio	 Dual
 Blu-ray	 Shift + 3
 AUX	 Shift + 4
 Tuner	 Shift + 5
 Bluetooth	 Shift + 6
 Game	 Shift + 7
 8K	 Shift + 8
 Phono	 Shift + 9
 USB	 Pre Ch
 Media Player	 Media
 CD	 Guide
 Heos	 Shift + 0
 Internet Radio	 TV/R
 CH/Page+	 Ch +

Original	Recharge
 CH/Page-	 Ch -
 Sleep	 Sleep
 Eco	 3D
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Option	 Options
 Back	 Back
 Setup	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Home	 Smart
 Stop	 Stop





Original		Rechange		Original		Rechange	
	Pause		Pause		4		4
	Play		Play		5		5
	I<</Tune-		I<<		6		6
	>>I/Tune+		>>I		7		7
	<<		<<		8		8
	>>		>>		9		9
	Smart Select 1		D. Menu		0		0
	Smart Select 2		Text				
	Smart Select 3		Eject				
	Smart Select 4		AV				
	Green/Movie		Green				
	Red/Music		Red				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				
	1		1				
	2		2				
	3		3				





Original	Rechange	Original	Rechange
 Power	 Power	 Stop	 Stop
 1	 1	 Pause	 Pause
 2	 2	 Play	 Play
 3	 3	 >>	 >>
 4	 4	 <<	 <<
 5	 5	 >> Tune+	 >>
 6	 6	 <</Tune-	 <<
 7	 7	 Smart Select 1	 D. Menu
 8	 8	 Smart Select 2	 Text
 9	 9	 Smart Select 3	 Eject
 0	 0	 Smart Select 4	 AV
 Up	 Up	 CH/Page+	 Ch +
 Enter	 Ok	 CH/Page-	 Ch -
 Down	 Down	 Sleep	 Sleep
 Right	 Right	 Mute	 Mute
 Left	 Left	 Back	 Back
 Home	 Smart	 Vol+	 Vol +




 
 


 
 

 









Original	Recharge
[Vol-]	VOL - Vol -
[CBL/SAT]	SHIFT + 1 Shift + 1
[DVD]	SHIFT + 2 Shift + 2
[Blu-ray]	SHIFT + 3 Shift + 3
[AUX]	SHIFT + 4 Shift + 4
[TUNER]	SHIFT + 5 Shift + 5
[Bluetooth]	SHIFT + 6 Shift + 6
[GAME]	SHIFT + 7 Shift + 7
[8K]	SHIFT + 8 Shift + 8
[PHONO]	SHIFT + 9 Shift + 9
[MEDIA PLAYER]	APP MEDIA Media
[INTERNET RADIO]	SEARCH TV/R TV/R
[CD]	-/-- GUIDE Guide
[USB]	FAV PRE-CH Pre Ch
[.:.]	SHIFT + 0 Shift + 0
[TV AUDIO]	SOUND DUAL Dual

Original	Recharge





Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Up	 Up
 Enter	 Ok
 Down	 Down
 Right	 Right
 Left	 Left
 Smart Select 1	 D. Menu

Original	Rechange
 Smart Select 2	 Text
 Smart Select 3	 Eject
 Smart Select 4	 AV
 Back	 Back
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Mute	 Mute
 Sleep	 Sleep
 Vol+	 Vol +
 Vol-	 Vol -
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 Blu-ray	 Shift + 3
 AUX	 Shift + 4
 Tuner	 Shift + 5
 Bluetooth	 Shift + 6
 Game	 Shift + 7





Original	Rechange
8K	Shift + 8
Phono	Shift + 9
USB	Pre Ch
Media Player	Media
CD	Guide
Internet Radio	TV/R
:.l.:	Shift + 0
Home	Smart
Stop	Stop
Pause	Pause
Play	Play
>>	>>
<<	<<
>> Tune+	>>
<< Tune-	<<
Tv Audio	Dual

Original	Rechange

