 


 


 








 



 


 





 


 
 


 
 


 

 
 



 
 

 

 

 



 




Original	Recharge	Original	Recharge
 Power	 Power	 Play	 Play
 Eco	 3D	 Pause	 Pause
 CH/Page+	 Ch +	 Stop	 Stop
 CH/Page-	 Ch -	 Home	 Smart
 Sleep	 Sleep	 >>I/Tune+	 >>I
 Mute	 Mute	 I<</Tune-	 I<<
 Volume+	 Vol +	 >>	 >>
 Volume-	 Vol -	 <<	 <<
 Info	 Info	 Green/Movie	 Green
 Option	 Options	 Red/Music	 Red
 Setup	 Menu	 Blue/Game	 Blue
 Back	 Back	 Yellow/Pure	 Yellow
 Up	 Up	 1	 1
 Enter	 Ok	 2	 2
 Down	 Down	 3	 3
 Right	 Right	 4	 4
 Left	 Left	 5	 5




 
 


 





 





 
 
 
 

 
 

 


 



 
 

 


 

 





 



Original	Recharge
6	6
7	7
8	8
9	9
0	0
1	Smart Select 1 REPEAT TEXT
2	Smart Select 2 TIMER AV
3	Smart Select 3 PICTURE FORMAT
TV AUDIO	SEARCH TV/R
4	Smart Select 4 E-MANUAL D.MENU
CBL/SAT	SHIFT + 1
DVD	SHIFT + 2
Blu-ray	SHIFT + 3
AUX1	SHIFT + 4
TUNER	SHIFT + 5
Bluetooth	SHIFT + 6
Game	SHIFT + 7

Original	Recharge
PHONO	SHIFT + 9
AUX2	SHIFT + 8
iPod / USB	GUIDE
Internet Radio	PRE-CH
Media Player	SHIFT + GUIDE
CD	SHIFT + 0
Online Music	SHIFT + PRE-CH





Original	Rechange	Original	Rechange
 Power	 Power	 >>	 >>
 CH/Page+	 Ch +	 <<	 <<
 CH/Page-	 Ch -	 >> /Tune+	 >>
 Sleep	 Sleep	  <</Tune-	  <<
 Mute	 Mute	 1	 1
 Volume+	 Vol +	 2	 2
 Volume-	 Vol -	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Smart Select 1	 Text
 Pause	 Pause	 Smart Select 2	 AV
 Play	 Play	 Smart Select 3	 Format



 

 



 



 


 
 



 






 
 
 
 
 

 

 
 

 


 



 

 

 



 


 
 





 



Original	Recharge
 Smart Select 4	 3D
 TV Audio	 TV/R
 Media Player	 SHIFT +  Guide
 Internet Radio	 PRE-CH
 CBL/SAT	 SHIFT +  Shift + 1
 DVD	 SHIFT +  Shift + 2
 Blu-ray	 SHIFT +  Shift + 3
 AUX1	 SHIFT +  Shift + 4
 Tuner	 SHIFT +  Shift + 5
 Bluetooth	 SHIFT +  Shift + 6
 Game	 SHIFT +  Shift + 7
 AUX2	 SHIFT +  Shift + 8
 Phono	 SHIFT +  Shift + 9
 iPod / USB	 GUIDE
 CD	 SHIFT +  Shift + 0
 Online Music	 SHIFT +  Shift + Pre Ch

Original	Recharge





Original	Rechange	Original	Rechange
 Power	 Power	 >> /Tune+	 >>
 CH/Page+	 Ch +	  <</Tune-	  <<
 CH/Page-	 Ch -	 <<	 <<
 Sleep	 Sleep	 >>	 >>
 Mute	 Mute	 1	 1
 Volume+	 Vol +	 2	 2
 Volume-	 Vol -	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Smart Select 1	 Text
 Pause	 Pause	 Smart Select 2	 AV
 Play	 Play	 Smart Select 3	 Format





Original		Rechange	
	Smart Select 4		3D
	TV Audio		TV/R
	Media Player		Shift + Guide
	Internet Radio		Pre Ch
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	AUX2		Shift + 8
	Phono		Shift + 9
	iPod / USB		Guide
	CD		Shift + 0
	Online Music		Shift + Pre Ch

Original		Rechange	

