



Original	Rechange
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV/Audio	 TV/Radio /
 Blu-ray	 Shift + 1
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + 5
 AUX2	 AV / Input / RDS
 Phono	 Audio / Lang I/II
 iPod/USB	 Guide / EPG / -/--
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Sound / Title
 Internet/Radio	 Shift + TV/Radio / Program
 CH+	 CH+ / Page+

Original	Rechange
 Vol+	 Vol+
 CH-	 CH- / Page-
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Info	 Info / Angle
 Up	 Up
 Option	 Shift + Setup / OPT / Tools
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze





Original	Recharge
Play	Play / Slow
I<</Tune-	I<< / Preset-
>>I/Tune+	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Smart Select 1	Shift + Red / Netflix /
Smart Select 2	Shift + Green / APP /
Smart Select 3	Shift + Yellow / YouTube /
Smart Select 4	Shift + Blue / Prime
Green	Green / APP / Repeat
Red	Red / Netflix / Search
Blue	Blue / Prime Video / Random
Yellow	Yellow / YouTube / Repeat
1	1
2	2
3	3
4	4

Original	Recharge
5	5
6	6
7	7
8	8
9	9
0	0







Original	Recharge	Original	Recharge
	Power		Power
	CBL/SAT		Setup / OPT /
	DVD		Shift + 2
	TV/Audio		TV/Radio /
	Blu-ray		AV / Input / RDS
	AUX1		Picture / Format
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Setup / OPT / Tools
	AUX2		Subtitle / EQ
	Phono		Audio / Lang I/II
	iPod/USB		Guide / EPG / -/--
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Shift + Fav / Marker / PC
	Internet/Radio		Shift + TV/Radio / Program
	CH+		CH+ / Page+

Original	Recharge	Original	Recharge
	Vol+		Vol+
	CH-		CH- / Page-
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	Vol-		Vol-
	Up		Up
	Left		Left
	Enter		Fav / Marker / PC
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-		I<< / Preset-
	>>/Tune-		>>I / Preset+





Original		Rechange		Original		Rechange	
	<<		<< / Tune-				
	>>		>> / Tune+				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Enter		OK				

