



Original	Recharge
 Off	 +  Shift + Power
 On	 Power
 HDMI	 +  Shift + 0
 Zone A	 Sound / Title
 Zone B	 Audio / Lang I/II
 A/D	 Red / Netflix / Search
 ATT	 Green / APP / Repeat
 SPKR A-B	 Yellow / YouTube / Repeat
 7.1	 Blue / Prime Video / Random
 TV	 +  Shift + 1
 DVD	 +  Shift + 2
 VCR	 +  Shift + 4
 DSS	 +  Shift + 9
 Tune	 +  Shift + 6
 CD	 +  Shift + 3
 CDR	 +  Shift + Fav / Marker / PC
 Tape	 +  Shift + 5

Original	Recharge
 AUX1	 +  Shift + 7
 AUX2	 +  Shift + 8
 Input Up	 CH+ / Page+
 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Input Down	 CH- / Page-
 Display	 Display / Media
 Surr	 Eject / Surround
 Volume-	 Vol-
 Top	 Smart / List
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home




[illegible]



Original	Recharge	Original	Recharge
	Power		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Memo		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8
	9		9
	CL		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/-



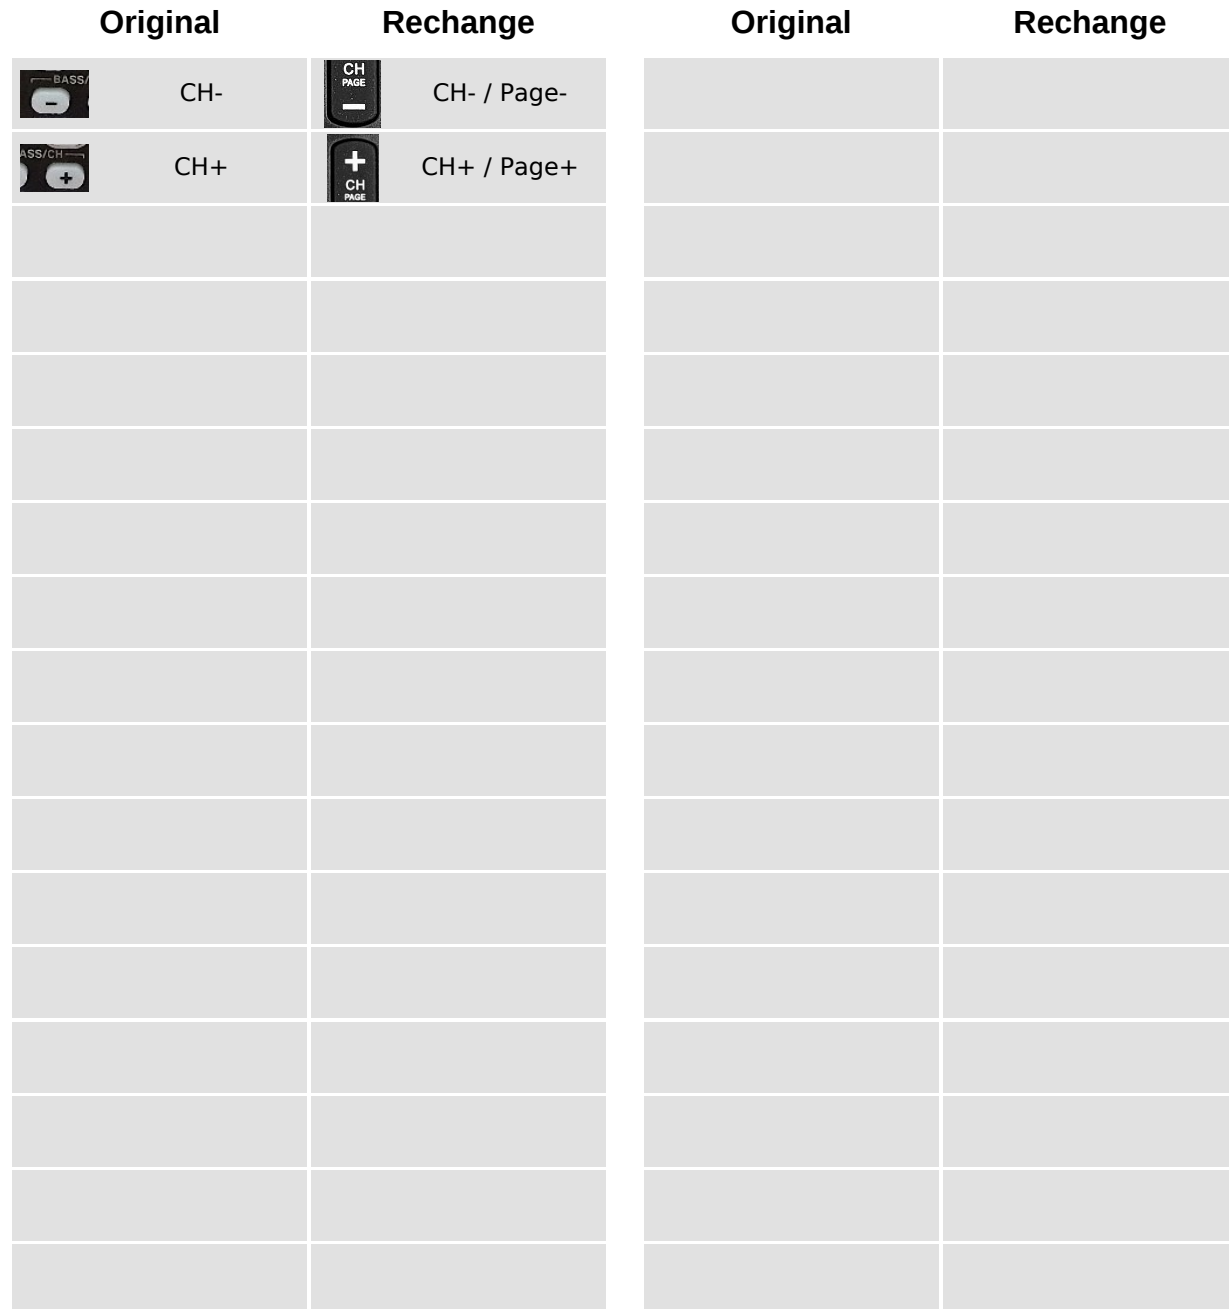



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Display	 Display / Media
 Volume-	 Vol-
 Tune+	 >> / Tune+
 Info	 Info / Angle
 Preset-	 I<< / Preset-
 Enter	 OK
 Preset+	 >>I / Preset+
 Menu	 Menu / Home
 Tune-	 << / Tune-
 Memo	 Smart / List
 T.Mode	 Text / Goto
 P.Scan	 D.Menu / Top
 Band	 Setup / OPT /
 1	 1

Original	Recharge
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CL	 Exit / Cancel / Clear
 0	 0
 CAT-	 CH- / Page-
 CAT+	 CH+ / Page+

