 


















 



















Original	Rechange
 1	 1
 Standby / On	 Power
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Enter	 OK
 Down	 Down
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Rechange
 9	 9
 0	 0
 Display	 Display / Media
 DVD Set Up	 Setup / OPT /
 Top Menu	 D.Menu / Top
 Return	 Back / Return
 Menu	 Menu / Home
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 <I	 << / Tune-
 I>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 S Title	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle





Original	Rechange	
On/Off		Power
Audio Off		Mute / Dimmer
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Lang		Audio / Lang I/II
Subt.		Subtitle / EQ
Zoom		Zoom / Size
Progr.		TV/Radio /
Top Menu		D.Menu / Top
C/CH		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Menu Left		Left
OK Enter		OK
Menu Right		Right

Original	Rechange	
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Auto/Track		Smart / List
Volume-		Vol-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/-
0		0
Rep/A-B		Yellow / YouTube / Repeat

