







 

















 











Original	Rechange
Power	Power
CBL/SAT	1
Media Player	2
Blu-ray	Guide / EPG / -/--
Game	4
AUX1	7
AUX2	Fav / Marker / PC
TV Audio	5
CD	3
Tuner	6
USB	8
Phono	0
Bluetooth	9
Internet Radio	Smart / List
Internet Radio	Display / Media
CH/Page+	CH+ / Page+
Eco	TV/Radio /

Original	Rechange
Volume+	Vol+
CH/Page-	CH- / Page-
Mute	Mute / Dimmer
Volume-	Vol-
Info	Info / Angle
Option	Shift + Setup / OPT / Tools
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Back	Back / Return
Setup	Setup / OPT /
I<</Tune-	I<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>I/Tune+	>>I / Preset+







Original	Recharge
 Power	 Power
 CBL/SAT	 1
 Media Player	 2
 Blu-ray	 Guide / EPG / -/--
 Game	 4
 AUX1	 7
 AUX2	 Fav / Marker / PC
 Tv Audio	 5
 CD	 3
 Tuner	 6
 USB	 8
 Phono	 0
 Bluetooth	 9
 Internet Radio	 Smart / List
 Internet Radio	 Display / Media
 CH/Page+	 CH+ / Page+
 Volume+	 Vol+

Original	Recharge
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I/Tune+	 >>I / Preset+
 Sleep	 Sleep / Timer
 Smart Select 1	 Red / Netflix / Search
 Smart Select 2	 Green / APP / Repeat
 Smart Select 3	 Yellow / YouTube / Repeat



