



Original	Recharge	Original	Recharge
 Power CD	 Power	 Tone/Balance	 Smart / List
 Open/Close	 Eject / Surround	 Volume+ AMP	 Vol+
 Power AMP	 Shift + Power	 Info	 Info / Angle
 CD	 Shift + 3	 Mute AMP	 Mute / Dimmer
 Tuner	 Shift + 6	 Volume- AMP	 Vol-
 Recorder	 Shift + 2	 Program	 TV/Radio /
 Optical 1	 Shift + 4	 Option	 Shift + Setup / OPT / Tools
 Optical 2	 Shift + 5	 Up	 Up
 Coaxial	 Shift + 1	 Left	 Left
 Phono	 Shift + 7	 Enter	 OK
 Network	 Shift + 8	 Right	 Right
 I<<	 I<< / Preset-	 Down	 Down
 Play	 Play / Slow	 Back	 Back / Return
 Pause	 Pause / Step / Freeze	 Setup	 Setup / OPT /
 >>I	 >>I / Preset+	 1	 1
 Stop	 Stop / Hold	 2	 2
 Input	 AV / Input / RDS	 3	 3





Original	Recharge	Original	Recharge
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
a/A	a/A	GUIDE EPG	Guide / EPG / -/--
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
DIMMER	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
FILTER	Filter	SIZE ZOOM	Zoom / Size

Original	Recharge

