














 


Original	Rechange
 Power	 Power
 [i]/Info	 Info
 Mute	 Mute
 I-II	 Dual
 OK/Select	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/+10	 Shift + Guide
 Exit	 Exit

Original	Rechange
 Menu	 Menu
 Red/1/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Yellow
 Blue/Angle	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<





Original		Rechange		Original		Rechange	
	>>		>>				
	[TV]		TV/R				
	D-Menu		Smart				
	TV		Media				
	AV		AV				
	P<P		Pre Ch				
	PP		D. Menu				
	[≡]		Text				
	[≡o]		Subt				
	[≡+]		Format				
	[≡x]		3D				
	[≡◆]/Wide		Shift + Format				
	[≡?]		Options				
	[≡i]/Guide		Guide				
	[::]/Subtitle		Back				




 












 



 



Original	Rechange	Original	Rechange
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<<	 <<<
 5	 5	 >>>	 >>>
 6	 6	 I<<<	 I<<<
 7	 7	 >>>I	 >>>I
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info

Original	Rechange	Original	Rechange
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<<	 <<<
 5	 5	 >>>	 >>>
 6	 6	 I<<<	 I<<<
 7	 7	 >>>I	 >>>I
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info





Original		Rechange		Original		Rechange	
	Open/Close		Eject				
	Menu		Menu				
	Select		Ok				
	Up		Up				
	Down		Down				
	Left		Left				
	Right		Right				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				

