



Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 AV / TV	 TV/R
 Menu	 Menu
 TXT	 Text
 PR +	 Ch +

Original	Rechange
 PR +	 Up
 PR -	 Ch -
 PR -	 Down
 Vol +	 Vol +
 Vol +	 Right
 Vol -	 Vol -
 Vol -	 Left
 OK	 Ok
 SWAP	 Back
 16:9	 Format
 White / i	 Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Stop	 Stop
 Reveal	 Smart





Original	Recharge	Original	Recharge
DOUBLE	Double	APP MEDIA	Media
SUB	SUB	AD SUBT	Subt
MIX	MIX	SHIFT + REPEAT TEXT	Shift + Text
	Update	ZOOM	Eject

