











 







 

 

 








































Original		Rechange		Original		Rechange	
	Standby		Power		Favorite		Fav / Marker / PC
	DTV/VCR		AV / Input / RDS		1		1
	Mute		Mute / Dimmer		2		2
	Info		Info / Angle		3		3
	Pause		Pause / Step / Freeze		Game		Display / Media
	Menu		Menu / Home		4		4
	EPG		Guide / EPG / -/--		5		5
	Exit		Exit / Cancel / Clear		6		6
	Up		Up		Recall		Back / Return
	CH+		CH+ / Page+		7		7
	Vol-		Vol-		8		8
	Left		Left		9		9
	OK		OK		0		0
	Right		Right		Tv/Radio		TV/Radio /
	Vol+		Vol+		Audio		Audio / Lang I/II
	CH-		CH- / Page-		Subtitle		Subtitle / EQ
	Down		Down		Text		Text / Goto



