







 





 








 

 









 





Original		Recharge		Original		Recharge	
	Mute		Mute / Dimmer		Red / Program		Red / Netflix / Search
	Power		Power		Green / Intro		Green / APP / Repeat
	S.Mode /		D.Menu / Top		Yellow / Repeat		Shift + Yellow / YouTube /
	S.Mode /		Shift + D.Menu / Top Menu		Yellow / Repeat		Yellow / YouTube / Repeat
	P.Mode / Title		Sound / Title		Blue / A-B		Blue / Prime Video / Random
	FAV + / Go To		Shift + CH+ /		Index / D.Disp.		Display / Media
	FAV - / Angle		Shift + CH- /		Sub-T		Subtitle / EQ
	<<		<< / Tune-		Audio / Lang		Audio / Lang I/II
	Play / Pause		Play / Slow		Size / Zoom		Zoom / Size
	Play / Pause		Shift + Play /		Info		Info / Angle
	>>		>> / Tune+		TV / Radio		TV/Radio /
	Reveal		Smart / List		FAV		Fav / Marker / PC
	I<<		I<< / Preset-		Sleep		Sleep / Timer
	Stop		Stop / Hold		Menu		Menu / Home
	>>I		>>I / Preset+		Exit		Exit / Cancel / Clear
	Rec		Rec / Rec Mode		Input		AV / Input / RDS
	Red / Program		Shift + Red / Netflix / Search		EPG		Guide / EPG / -/-





Original	Recharge
 P +	 CH+ / Page+
 Up	 Up
 Vol +	 Vol+
 Left	 Left
 OK	 OK
 Right	 Right
 P -	 CH- / Page-
 Down	 Down
 Vol -	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Recharge
 9	 9
 Text / Setup	 Text / Goto
 Text / Setup	 Shift + Text /
 0	 0
 Recall / Eject	 Shift + Back / Return
 Recall / Eject	 Back / Return

