














 
 


























	Original	Rechange	Original	Rechange
	Power			Right / >>
	OPTICAL			Right / >>
	OPTICAL			Bass-
	Mute			Vol-
	AUX			Vol-
	AUX			Bass+
	BT			Flat
	BT			Movie
	HDMI ARC			Music
	HDMI ARC			
	Vol+			
	Vol+			
	Left /  <<			
	Left /  <<			
	Play/Pause / Pair			
	Play/Pause / Pair			
	Play/Pause / Pair	