



Original		Rechange		Original		Rechange	
	Power		Power		Back		Back
	TV / Rad		TV/R		Exit		Exit
	Audio		Dual		Vol +		Vol +
	Text		Text		Vol -		Vol -
	App		Media		i		Info
	List		List		Mute		Mute
	Red		Red		Prog +		Ch +
	Green		Green		Prog -		Ch -
	Yellow		Yellow		1		1
	Blue		Blue		2		2
	Menu		Menu		3		3
	EPG		Guide		4		4
	Up		Up		5		5
	Down		Down		6		6
	Right		Right		7		7
	Left		Left		8		8
	OK		Ok		9		9





Original	Rechange	Original	Rechange

