



Original	Recharge
Source	AV / Input / RDS
Power Tv	Power
[+]	Shift + OK
3D	Zoom / Size
Theatre	Shift + Smart / List
<</< button"/> <</<	<< / Tune-
Play	Play / Slow
>>/ > button"/> >>/ >	>> / Tune+
Sync Menu	Shift + D.Menu / Top Menu
I<<	I<< / Preset-
Stop	Stop / Hold
>> button"/> >>	>> / Preset+
?/i-Manual	Shift + Setup / OPT / Tools
Scene	Picture / Format
BD/DVD Top	Shift + Menu /
BD/DVD Menu	D.Menu / Top
Digital/Analog	Shift + Display / Media

Original	Recharge
Exit	Exit / Cancel / Clear
Internet Widgets	Display / Media
Internet Video	Smart / List
♥/FAV	Fav / Marker / PC
Guide	Guide / EPG / -/-
Right	Right
[i+]/Info	Info / Angle
Up	Up
OK	OK
Left	Left
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home	Menu / Home
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat







Original	Recharge
Blue	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
[≡]/Text	Text / Goto
0	0
[...]	Subtitle / EQ
Vol+	Vol+
Prog+	CH+ / Page+
Mute	Mute / Dimmer
Audio	Audio / Lang I/II

Original	Recharge
Vol-	Vol-
Prog-	CH- / Page-



 







 


 












 

 

 

 

 

 



 

 

 





 


 







 







Original	Rechange
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Home	 Shift + Menu /
 1	 1

Original	Rechange
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [...]	 Subtitle / EQ
 Prog+	 CH+ / Page+
 Audio	 Audio / Lang I/II
 Prog-	 CH- / Page-

 



 





 





 

 



 

 













 



 

 





 







 





 

 





Original	Recharge	Original	Recharge
 Power	 Power	 Home	 Shift + Menu /
 <</<	 << / Tune-	 Red	 Red / Netflix / Search
 Play	 Play / Slow	 Green	 Green / APP / Repeat
 >>/ >	 >> / Tune+	 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Preset-	 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold	 1	 1
 >>	 >> / Preset+	 2	 2
 Top Menu	 D.Menu / Top	 3	 3
 Menu	 Menu / Home	 4	 4
 Right	 Right	 5	 5
 [i+]/Info	 Info / Angle	 6	 6
 Up	 Up	 7	 7
 OK	 OK	 8	 8
 Left	 Left	 9	 9
 Return	 Back / Return	 [≡]/Text	 Text / Goto
 Down	 Down	 0	 0
 Options	 Setup / OPT /	 [...]	 Subtitle / EQ





Original	Rechange	Original	Rechange
	 Source		 Home / Shift + Menu /
	 Power		 1
	 << / Tune-		 2
	 Play / Slow		 3
	 >> / Tune+		 4
	 I<< / Preset-		 5
	 Stop / Hold		 6
	 >>I / Preset+		 7
	 Top Menu / D.Menu / Top		 8
	 Menu / Home		 9
	 Right		 [≡]/Text / Text / Goto
	 [i+]/Info / Info / Angle		 0
	 Up		 Subtitle / EQ
	 OK		 Vol+
	 Left		 Mute / Dimmer
	 Back / Return		 Audio / Lang I/II
	 Down		 Vol-

