



Original	Rechange
 Standby	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 10+	 Guide
 Goto	 Pre Ch
 Setup	 Options
 Play/Pause	 Play
 Play/Pause	 Pause

Original	Rechange
 Mute	 Mute
 A-Mode	 Smart
 Angle	 Format
 V-Mode	 D. Menu
 Prog	 Sleep
 OSD	 Info
 Source Select	 AV
 >> / Search+	 >>
 << / Search-	 <<
 Vol+	 Vol +
 Vol-	 Vol -
 >>I / Radio+	 >>I
 I<< / Radio-	 I<<
 Title / AM/FM	 TV/R
 Auto / Subtitle	 Subt
 Up	 Up
 Left	 Left





Original	Recharge	Original	Recharge
Enter	Ok		
Right	Right		
Down	Down		
Audio / Memory	Dual		
Menu / Mo/St	Menu		
S.Effect	Red		
CH Level	Green		
Tone	Yellow		
USB	Media		
Step	+ Shift + Pause		
Zoom	+ Shift + Eject		
Repeat	Text		
A-B	+ Shift + Text		
Stop	Stop		

Original	Recharge

